




Conseil Technique – Technical Advise

# Pose filet de clapet

## Installation of the valve net

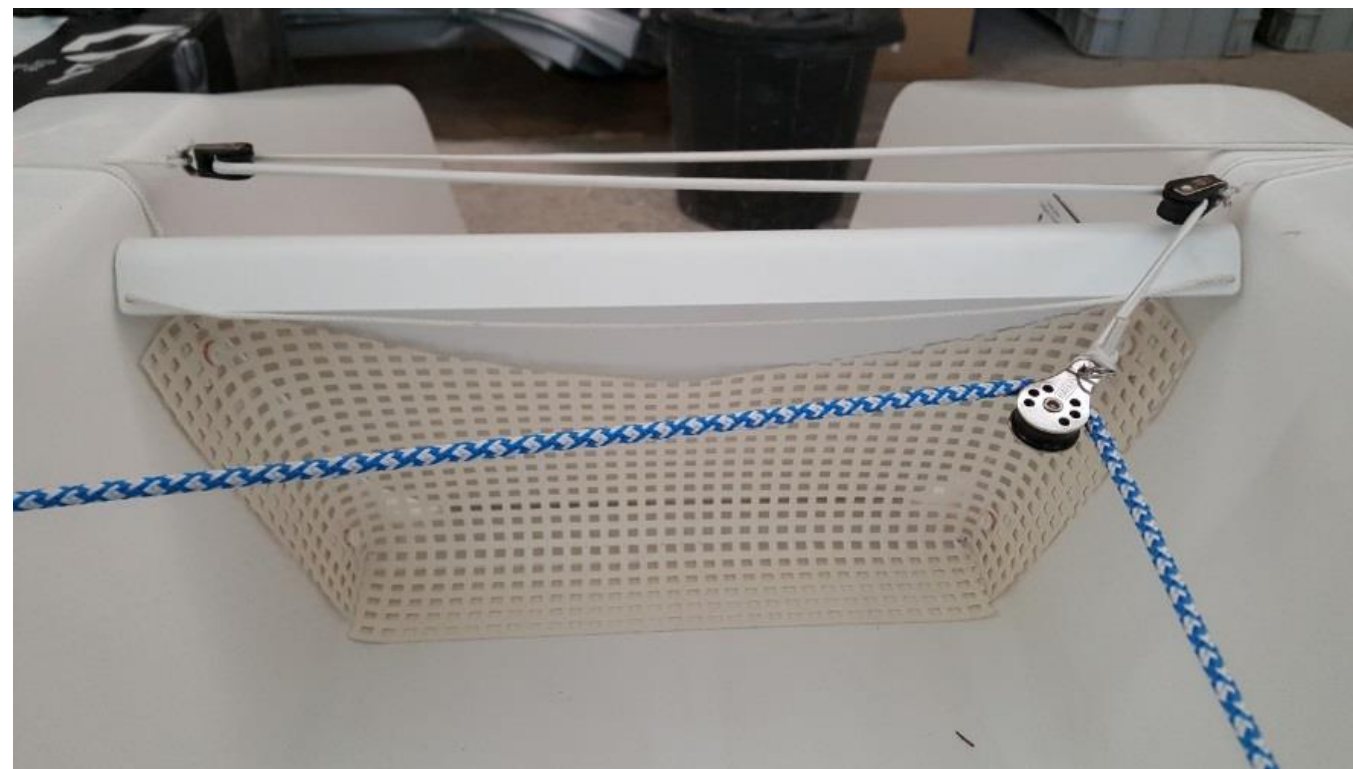


Vous en avez marre que les écoutes partent à l'eau par le clapet de la coque centrale ? On a la solution, installez un filet ! Rien de plus simple, il suffit de suivre le conseil technique ci-dessous.

#### Matériel

- Mastic PU type Sika
- Paire de ciseaux
- Chiffon
- Acétone

#### Contenu du Kit

- 1 filet de clapet prédécoupé
- 4 champignons
- 2 gabarits de pose des champignons (Bâbord et Tribord)

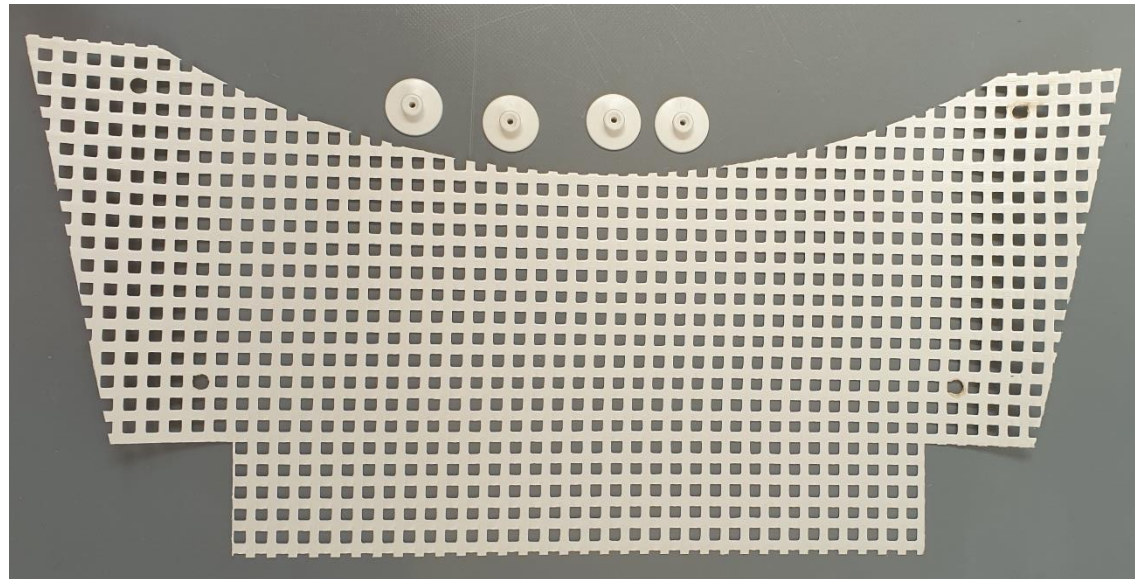

#### Étapes

Le filet de clapet se situe sous le clapet sous le bras arrière. Il est conseillé de poser les champignons bateau démonté, ça facilitera l'accès au clapet.


You are tired of the sheets going into the water through the main hull valve. We have the solution, install a net! Nothing could be easier, just follow the technical advice below.

#### Equipment

- Sika-type PU mastic
- Pair of scissors
- Rags
- Acetone


#### Kit content

- 1 pre-cut valve net
- 4 mushrooms
- 2 templates for fitting the mushrooms (port and starboard)


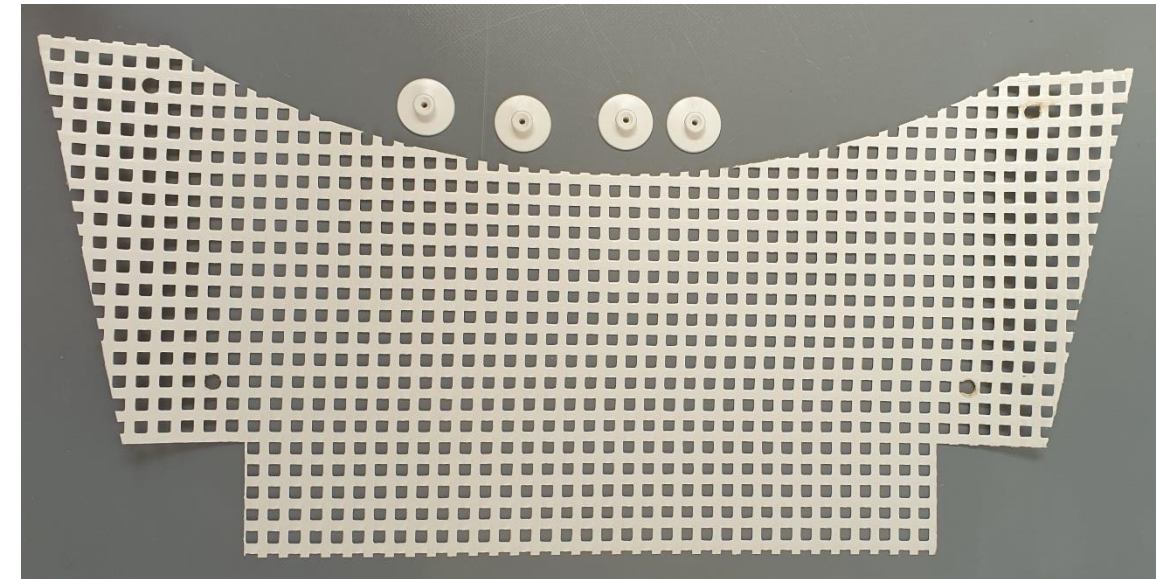


#### Steps

The valve net is located under the valve under the rear arm. It is recommended to install the mushrooms when the boat is disassembled, as this will facilitate access to the valve.

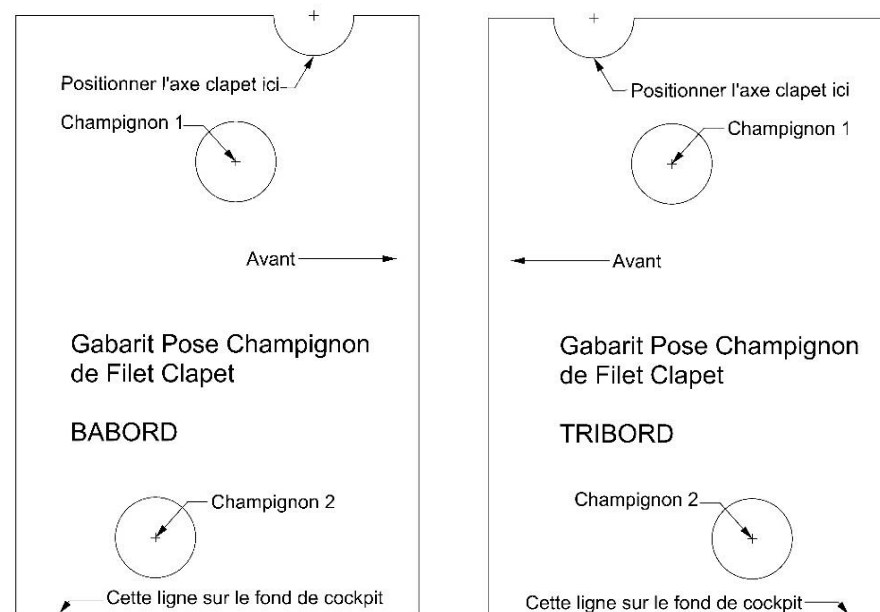

1. Découper les gabarits en papier, détourer les cercles pour les champignons et le demi-cercle pour positionner l'axe du clapet.
2. Mettre en position le gabarit sur les flancs de cockpit en prenant en compte les indications écrites dessus (axe clapet et ligne de fond de cockpit).
3. Nettoyer la surface à l'acétone.
4. Tracer au crayon à papier la position des champignons.
5. Appliquer un cordon de mastic PU sur le champignon et le coller à sa place.
6. Attendre 24 h avant de mettre en place le filet de clapet sur les champignons. Attention, il y a déjà 4 trous élargi pour faire passer les champignons.

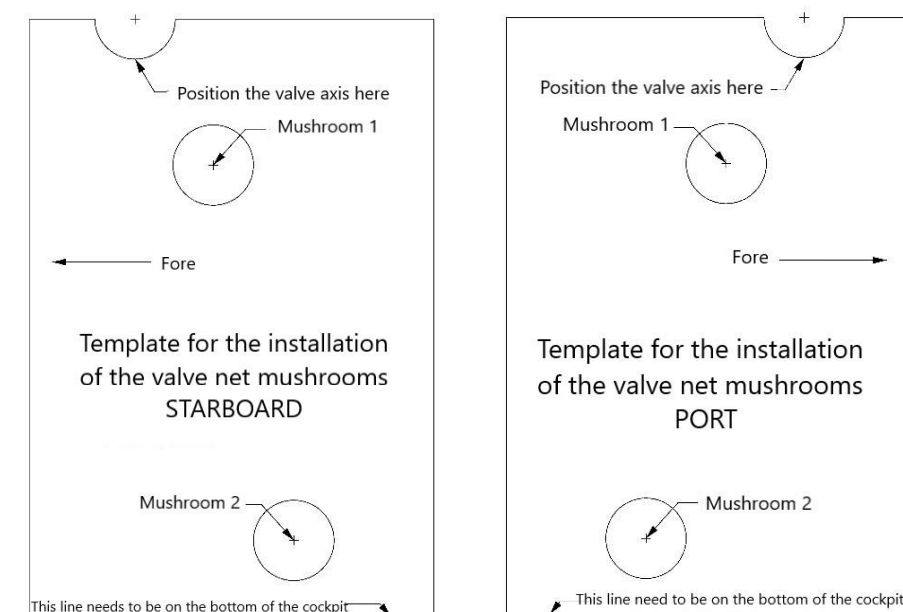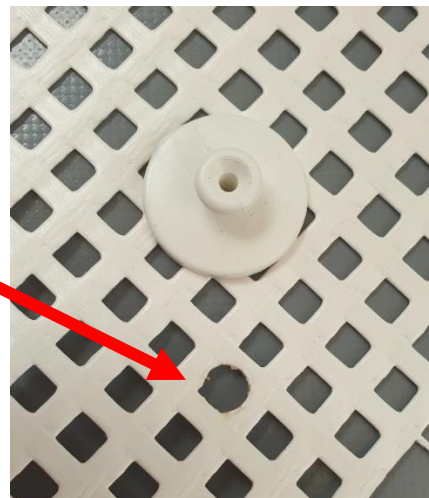

1. Cut out the paper templates, cut out the circles for the mushrooms and the semi-circle to position the valve axis.
2. Place the template on the cockpit sides, taking into account the indications written on it (valve axis and cockpit bottom line).
3. Clean the surface with acetone.
4. Draw the position of the mushrooms with a pencil.
5. Apply a bead of PU filler to the mushroom and glue it in place.
6. Wait 24 hours before applying the valve net to the mushrooms. Please note that there are already 4 enlarged holes for the mushrooms.

