




Conseil Technique – Technical Advise

# Montage taquet ouverture constrictor

## Constrictor opening cleat assembly

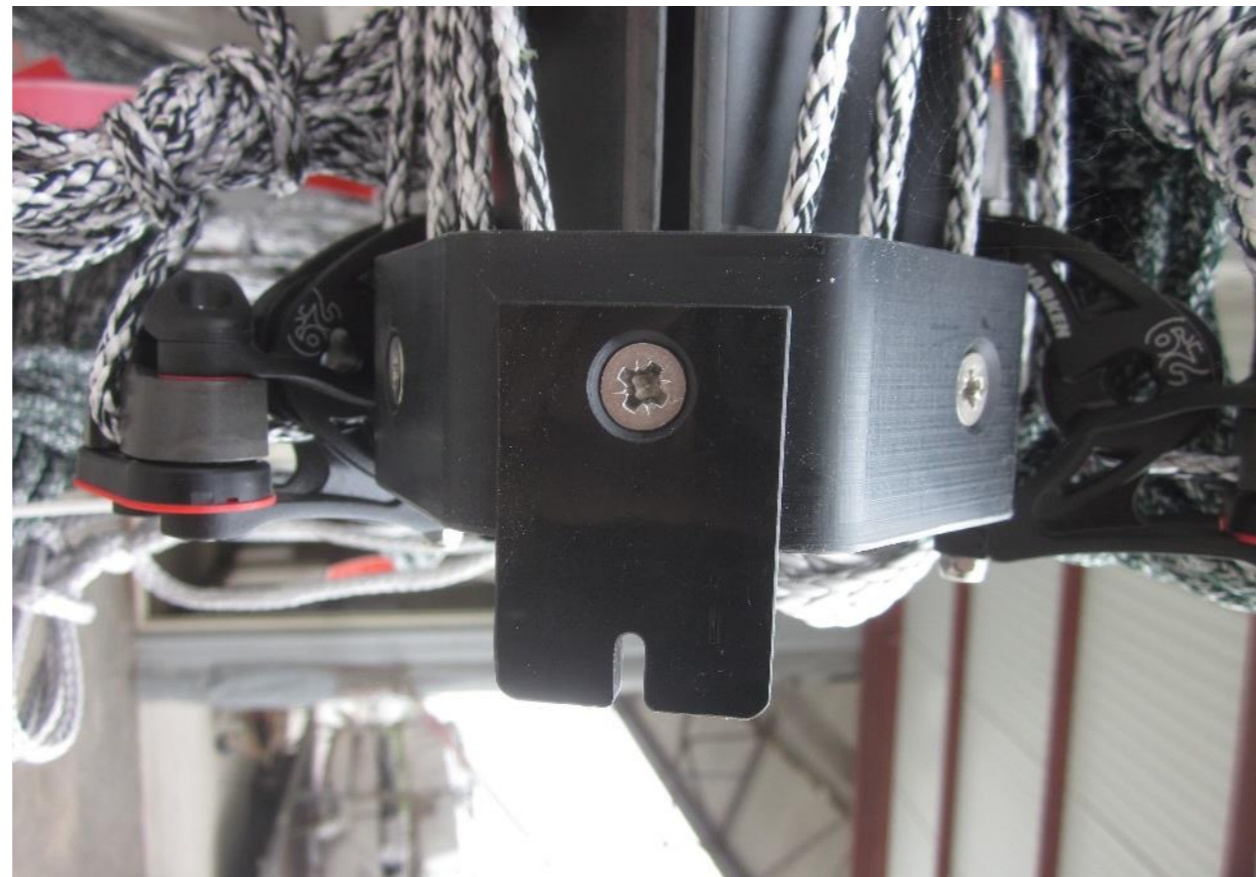

Matériel

- Tournevis Pozidriv


Contenu du kit

- 1 Taquet ouverture constrictor
- 1 vis 6 x 30 mm

Etapés

1. Démontage de l'ancienne vis


Au niveau des réas du pied de mât, il faut enlever la vis existante. Il faut la dévisser doucement et à la main pour ne pas que la vis se casse dans le pied de mât.

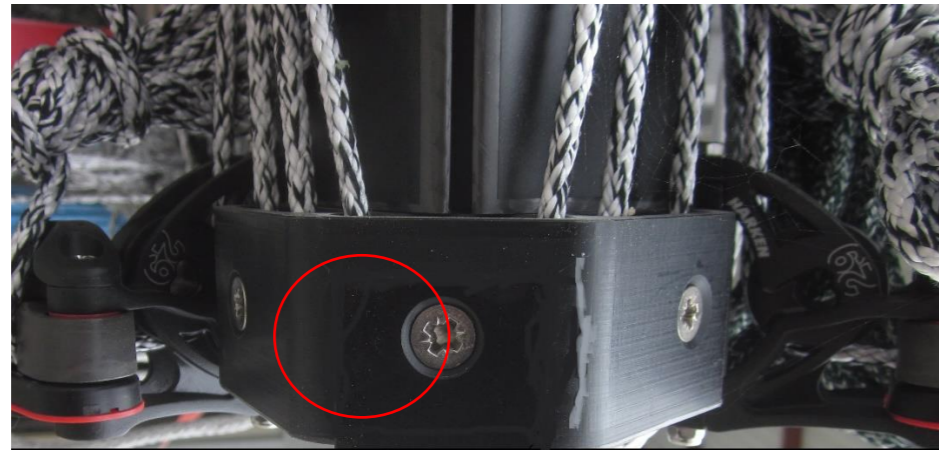

2. Mise en place de la nouvelle équerre

Placer l'équerre avec la fente vers le bas (voir la photo ci-dessous).

Poser la vis 6 x 30 mm et serrer la vis délicatement pour ne pas abimer le filetage. Serrer jusqu'à être en butée.

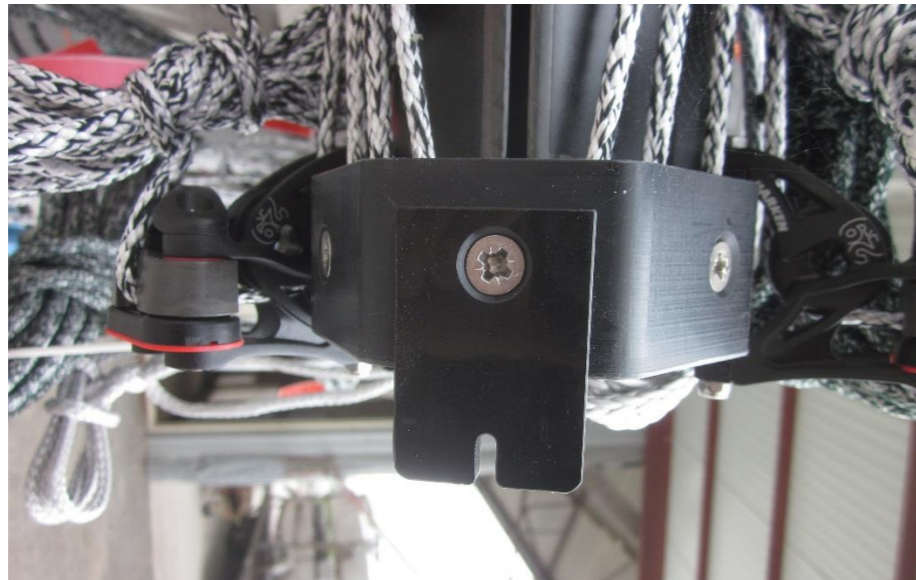Equipment

- Pozidriv screwdriver

Kit content

- 1 constrictor opening cleat
- 1 screw 6 x 30 mm

Steps

1. Remove the old screw

At the mast foot sheaves, remove the existing screw. It must be unscrewed gently and by hand to prevent the screw from breaking in the mast foot.



2. Fitting the new bracket

Place the bracket with the slot facing downwards (see photo below).

Fit the 6 x 30 mm screw and tighten the screw gently to avoid damaging the thread.

Tighten until you reach the stop.

